

SPIRIT 450 UNIT

FITTING INSTRUCTIONS


Please retain for future reference

Installation

1. The knob supplied is fitted to the rear of the door. This should be removed and re-fitted to the front
2. The basin should be secured to the unit and the wall using silicone
3. The unit is supplied with a plumbing void at the rear for the waste and tap feeds. Any additional cuts made to the unit for plumbing etc should be re-sealed using a suitable varnish / water resistant paint
4. The door on this unit is reversible. To change handing simply unscrew handles from carcass, rotate door through 180 degrees and then reattach to other side

Cleaning and maintenance

1. Clean with a soft damp cloth only. Do not scrub / scour or use cream cleaners or cleaners containing bleach
2. Any water spillages or heavy condensation should be wiped away immediately to prevent any deterioration
3. To remove lime-scale deposits, use a proprietary cleaner having first checked that it is suitable. If necessary, test on an inconspicuous area first

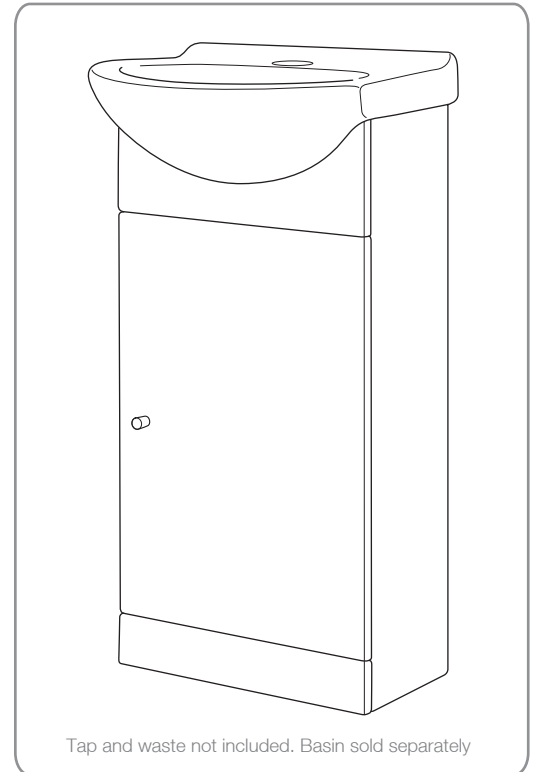

Hinge adjustment

1. The door is factory aligned. It may however move during transit. Adjustments can be made as shown in the diagrams below and right
- A) To move doors up or down: loosen screws A on both hinges then move the door to desired position before re-tightening
- B) To move the doors left to right simply turn screws B
- C) To move the doors in or out from frame: loosen screw C. Move door to desired location then re-tighten

