

KLEIN - WALL HUNG PAN

FITTING INSTRUCTIONS

Please retain for future reference

INSTALLATION INSTRUCTIONS

1. Mark the desired position of the wall hung pan on the wall with a pencil. The two fixing pins on the concealed wall hanging frame should be 180mm apart. Ensure that a minimum distance of 10mm is kept between the rubber washer and metal nut for the washers to be inserted later.

2. Slide the pan onto the locating pins and connect the concealed cistern fittings to the pan. Insert the metal washer inside the plastic washer.

3. Using the hooked end of the metal rod, position the plastic and metal washers onto the fixing pins, with the plastic washer facing the back of the pan towards the wall.

4. Using the straight end of the metal rod, tighten the nut onto the fixing bolt securing the pan to the wall.

5. When the fixings are tight, remove the metal rod from the nut and push the plastic cover cap into the slot to hide the fixings.

6. With the pan securely fixed to the wall, flush test the pan and check for any leaks.

