

MARIS - Freestanding Bath / Shower Mixer Installation & Aftercare Instructions

Retain for future reference



Customer Services

Soakology, Unit 5, Brassmill Lane Enterprise Centre Brassmill Lane, Bath, BA1 3JN
t. 0845 862 9888 e. contact@soakology.co.uk w: www.soakology.co.uk

Part of Total Bathroom Enterprises Ltd
VAT No. 153612626 Company No. 8260845

MARIS - Freestanding Bath / Shower Mixer Installation & Aftercare Instructions

Installation Procedures


Prior to installation flush out the pipe work to remove debris and then ensure the water supply is turned off.

Refer to diagram and ensure all components are present.

1. Before installing the freestanding bath / shower mixer, ensure the desired installation position is suitable and allows access for the flexible hoses to be connected to the water supply.
2. Lift the round base-plate cover (A) from the bottom of the bath / shower mixer body to allow access to the fixing plate (B). Connect the flexible hoses (C) to the supply pipes under the floor. PTFE tape can be used on the connections to ensure a watertight seal.
3. Connect the shower hose to the shower handset and to the water outlet on the bath / shower mixer body.
4. Turn the water supply back on to check the water is flowing correctly through the bath filler and shower head. Check all of the connections for leaks.
5. Secure the fixing plate (B) to the floor using the fixing screws (D) supplied.
6. Lower the base plate cover over the fittings.

Aftercare Instructions

Whilst the item has a high quality durable finish, it should nevertheless be treated with care. Surfaces should be cleaned only using a soft damp cloth and clean water and dried using a soft cotton cloth. Bath cleaning products, even non scratch ones could damage the finished surface.

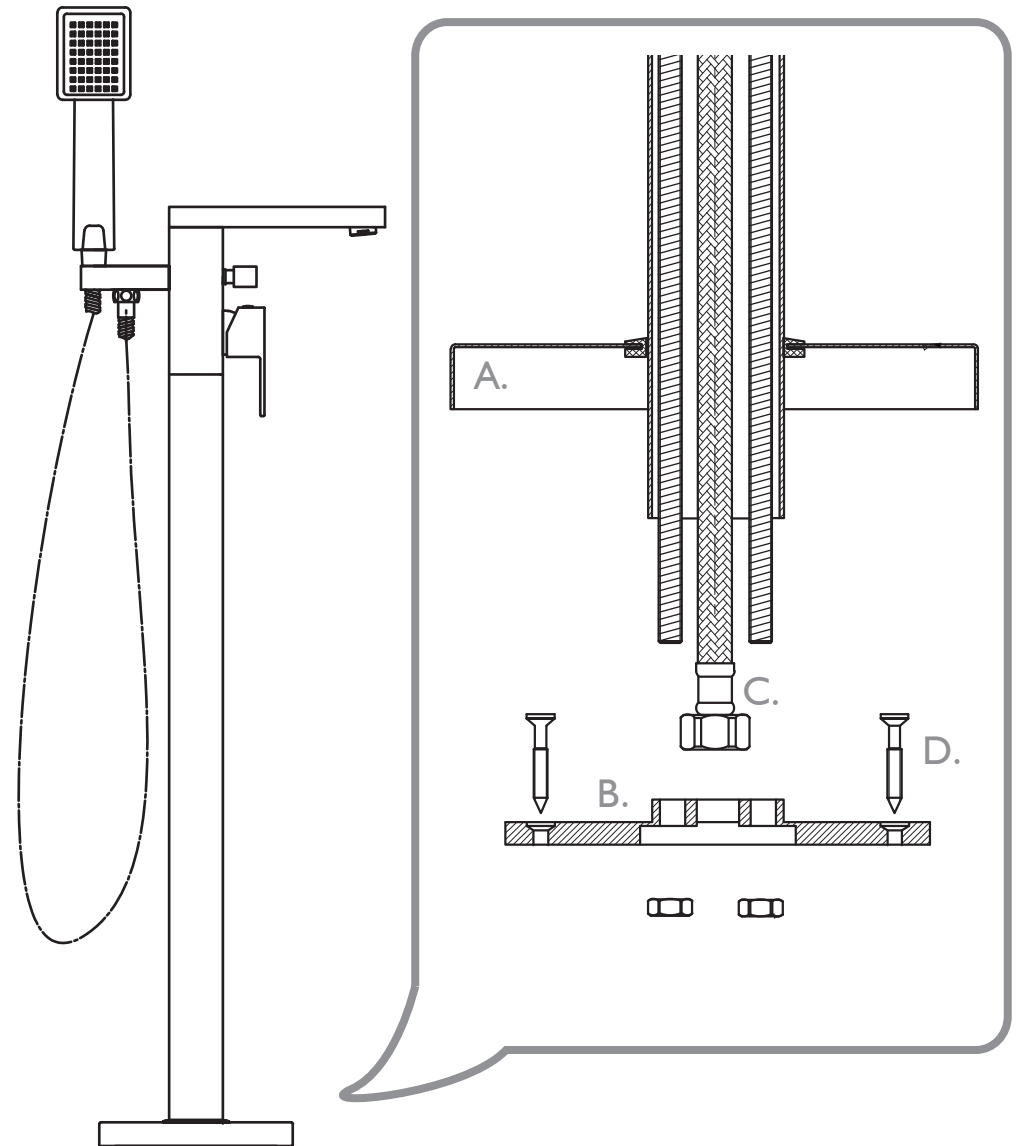

Customer Services

Soakology, Unit 5, Brassmill Lane Enterprise Centre Brassmill Lane, Bath, BA1 3JN
t. 0845 862 9888 e. contact@soakology.co.uk w: www.soakology.co.uk