



# **ELEMENTS WALL MOUNTED UNIT Installation & care instructions**

Please retain for future reference

# Before you start


It is recommended that the unit and basin are secured to a suitably reinforced wall to ensure stability. The wall plugs supplied are only suitable for solid stone / brick walls. For plasterboard walls use specialist wall plugs along with supplementary wall strengthening as units can be very heavy. Seek advice from a specialist about the suitability of fixings to be used. Wear suitable eye protection when drilling. Take care when using power tools near water - the use of a residual current device (RCD) is recommended. Beware of hidden pipes or cables. Take care when drilling tiled surfaces as the drill might slip. Use a piece of masking tape to prevent the drill from wandering.

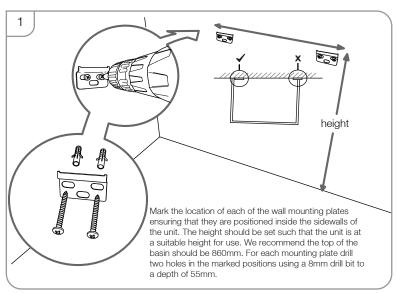


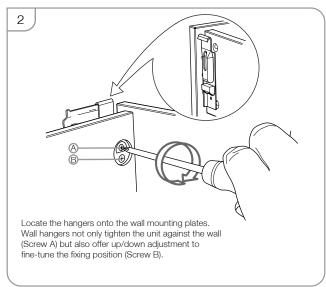

#### **Fascia Adjustment**

Fascias may require adjustment for correct alignment. If adjustment is required follow instructions below.

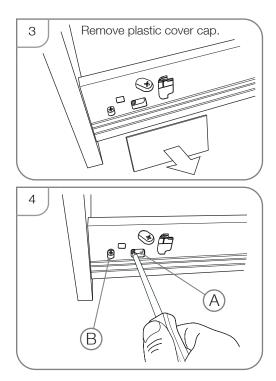

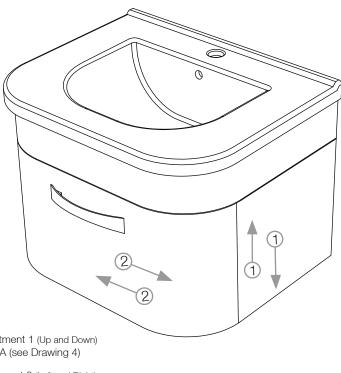

To make adjustment 1 (Up and Down) turn screw A (see Drawing 4)

To make adjustment 2 (Left and Right) turn screw B (see Drawing 4)





# **ELEMENTS WALL MOUNTED UNIT Installation & care instructions**


Please retain for future reference


#### Removing the fascias

If faulty or damaged, the fascias can be removed and replaced. To remove the Fascias please follow the instructions below:.

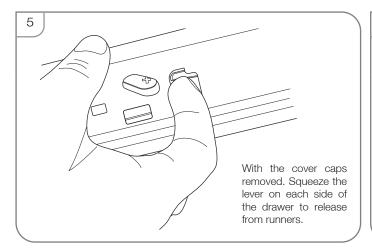

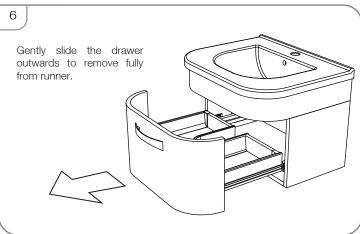

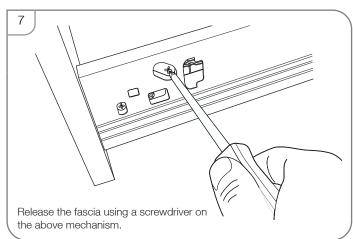

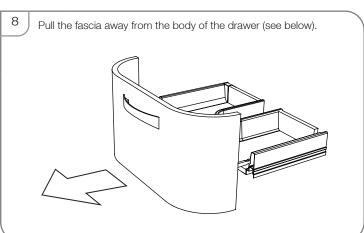

NOTE - When replacing the drawers back onto the runners ensure they have been 'clicked' back into position.

#### Fitting handle

The handle can simply be screwed into place using the screws supplied

# Fitting ceramic basin

Once the basin has been plumbed in finish by securing to the washstand using a silicone sealant (not supplied).

## **Furniture Aftercare Instructions**

As with all wooden furniture, this product should be treated with care.

## We recommend...

Wipe away any water splashes or condensation after use. Excessive exposure to water will deteriorate the furniture.

All bathrooms should be well ventilated with a suitable extractor fan.

Clean with a soft damp cloth only.

Use a wax free polish if one must be used.

For removal of lime scale deposits use a suitable proprietary cleaner. If necessary test on an inconspicuous area first

# Please DO NOT...

Do not scrub or scour

Do not use abrasive cleaning agents

Replacement components - Should you require any replacement components for this product please contact Soakology using the contact details below.