

1 DOOR / OFFSET QUADRANT

IMPORTANT

Thank you for choosing Merlyn. Please familiarise yourself with the fitting instructions before commencing fitting.

1. Check that you have the tools required.
2. Check the installation site is compatible with size of door supplied
3. Check all the enclosure components.
4. Check the installation kits is complete


DO NOT attempt to install the product unless you can tick ALL 4 boxes above as satisfactory.


The wall plugs supplied with the installation kit are for use in solid walls. Hollow or 'stud-partition' walls will require alternative fixings. Please consult a hard ware supplier for the correct type.

It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.

USE SAFETY EYEWEAR WHEN DRILLING

Any parts missing or damaged must be reported to your supplier within 5 days of purchase. Inspect shower enclosure before fitting no claims will be acceptable after product has been installed.










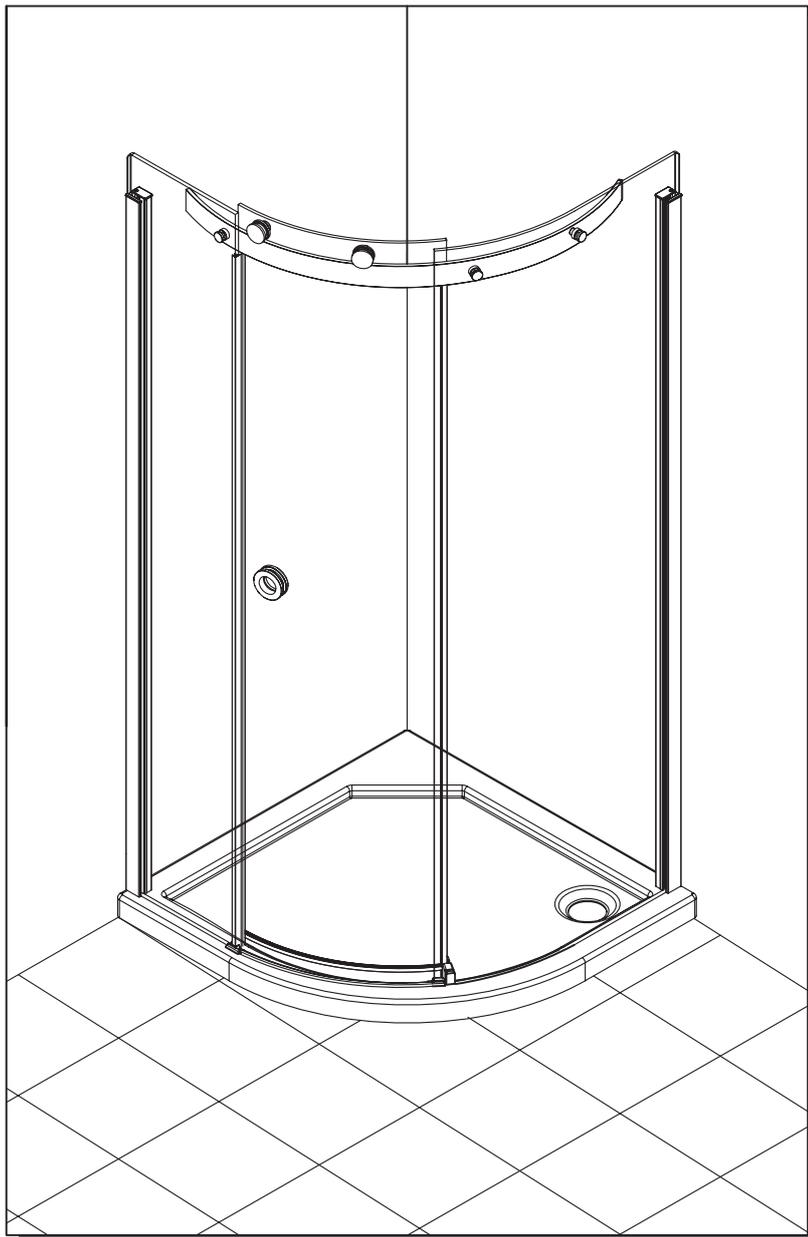


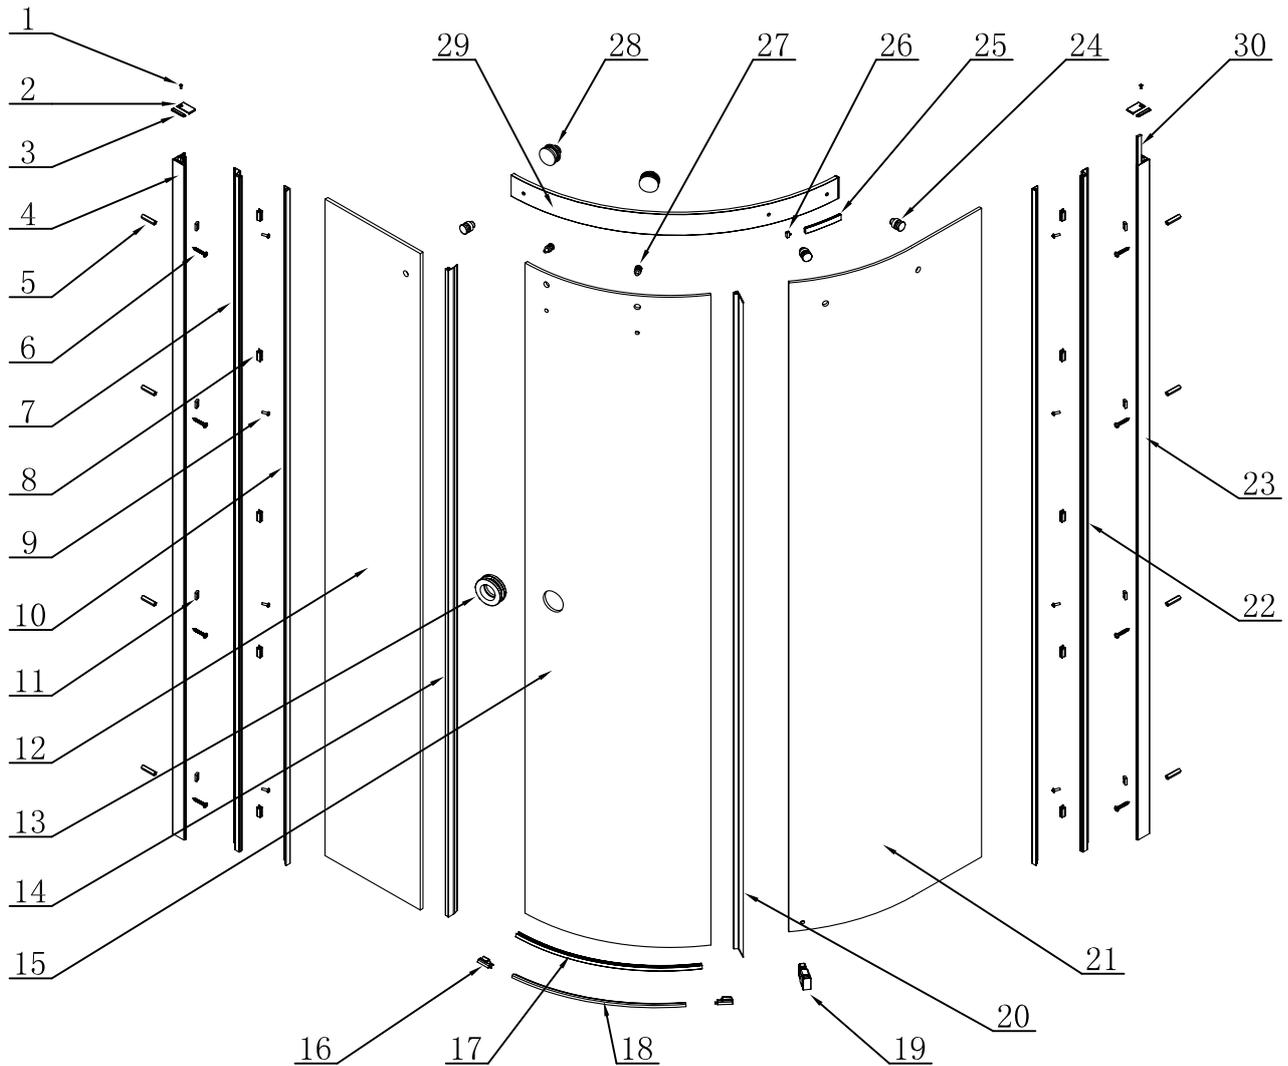

No.	Description	QTY	Part No.	No.	Description	QTY	Part No.
1	Cover cap fixing screw ST4*16	2	ST4*16G	16	10mm footplate (L/R)	2	10S2310L/R
2	Wall profile inside cover cap(L/R)	2	10S14L/R	17	Door panel bottom seal	1	10S10AP570
3	Wall profile outside cover cap(L/R)	2	10S15L/R	18	Luna rail	1	10S28P527
	Complete wall profile(10mm)1850 - includes 4,7,8,9,11,30	1	10SWPSET185010	19	Glide	1	10S11A8
4	Wall profile-Main section(10mm)	1	10S01AP1850	20	Upright seal	1	10S09P1870
5	Standard wall plug 6*30	8	6*30WSER	21	Curved fixed panel	1	B
6	Wall fixing screws ST4*30	8	ST4*30B		Complete wall profile (8mm) 1850 - curved fixed panel - includes parts 22, 23, 8, 9,11,30	1	10SWPSET18508
7	Wall profile inside section(10mm)	1	10S02AP1850	22	Wall profile inside section (8mm)	1	10S02AP1850
8	Nylon clip - wall profile	10	10S27	23	Wall profile main section (8mm)	1	10S01AP1850
9	Clamping screws M5*16	8	M5*16R	24	Rail to glass fixing part	3	10S17
10	Trim strip -1850	2	10S03AP1850	25	Roller stop rubber	1	10S06AP145
11	Clamping block for wall profile	8	10S22	26	Roller stop end	1	10S06BL/R
12	Flat fixed panel	1	A	27	Glass locating pin	2	10S16
13	Handle	1	10S198	28	Rollers	2	10S18
14	Upright seal	1	10S09P1870	29	Top rail	1	C
15	Door panel	1	D	30	Wall profile clamping seal	4	10S07P1850

Note: Further part details for fixing kit available on page 2

Fixing Kit components

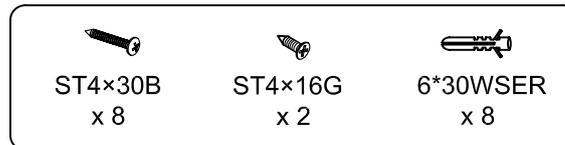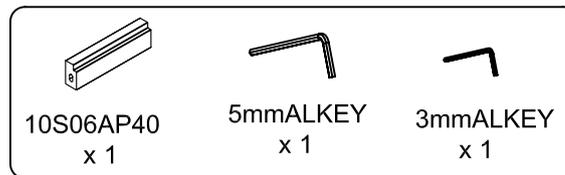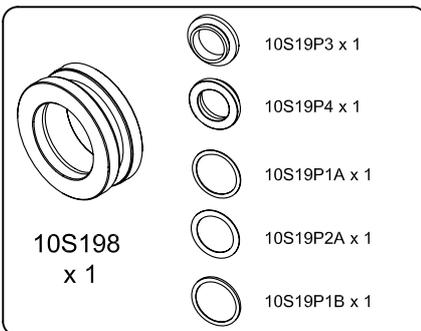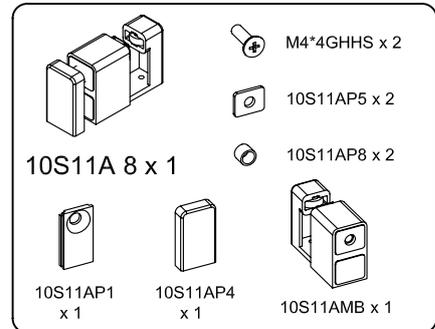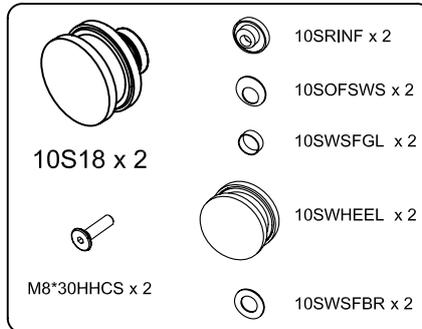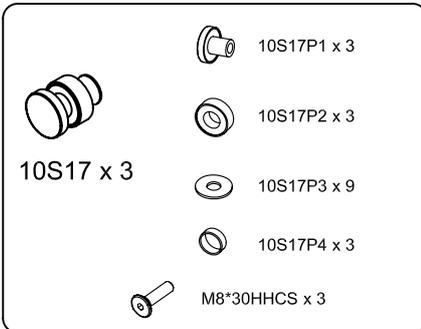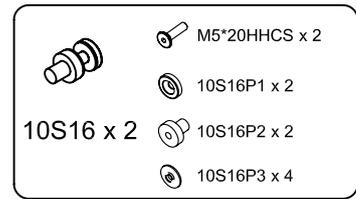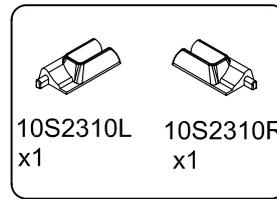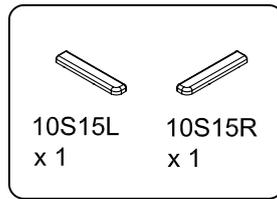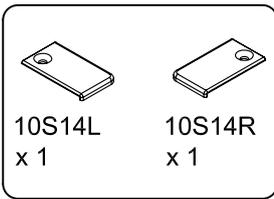


Tools required

- 6mm Masonry drill bit
- Power drill
- Quality silicone
- Pencil
- Tape Measure
- #2 Philips Head screw driver
- Spirit level with horizontal and vertical level indicators

IMPORTANT - Installation site

1. Ensure the top surface shower tray on which the enclosure will be installed is level in every direction.
2. The tiling or other finishing should be effectively sealed at the tray edges.
3. Tiles should extend at least to the corners of the tray and a minimum of 1.9 meters from the top of the tray.

PROCEDURE

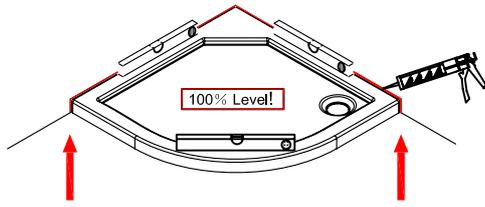

TRAY MUST BE 100% LEVEL IN ALL DIRECTIONS

Ensure the shower tray is level in all directions and is properly sealed to the wall. The wall must be tiled down to the top edge of the tray. **Do not angle out bottom line.**

TRAY MUST BE SEALED FULLY AROUND WHERE THE TRAY MEETS THE WALL.

Step 1.

Step the wall profile **10SWPSET1850** 15mm from the front edge of the shower tray. Ensure the profile is plumb.

Step 2.

Mark the position for fixing the wall profile to the wall. **IMPORTANT:** Must mark the centre of all slots in wall profile as the extra will be needed for adjustment later on .

Step 3.

Drill hole (**THROUGH THE CENTER OF THE SLOT**) with 6mm masonry drill bit and insert the wall plugs **6*30WSER**.

Step 4.


Fix the wall profile to the wall through the centre of the slot with screws **ST4*30B**. Repeat for second wall profile.

Note: Wall profiles are labelled depending on the glass panel used on each side - Use correct profile with correct fixed panels on each side.

Step 5.

Insert the fixed panels fully into the wall profiles (when slotted in fully - should be no gap behind the glass) ensuring footplates **10S2310L/R** are on the bottom corners of the fixed panels.

Note: curved fixed panel footplate to have small gap on inside

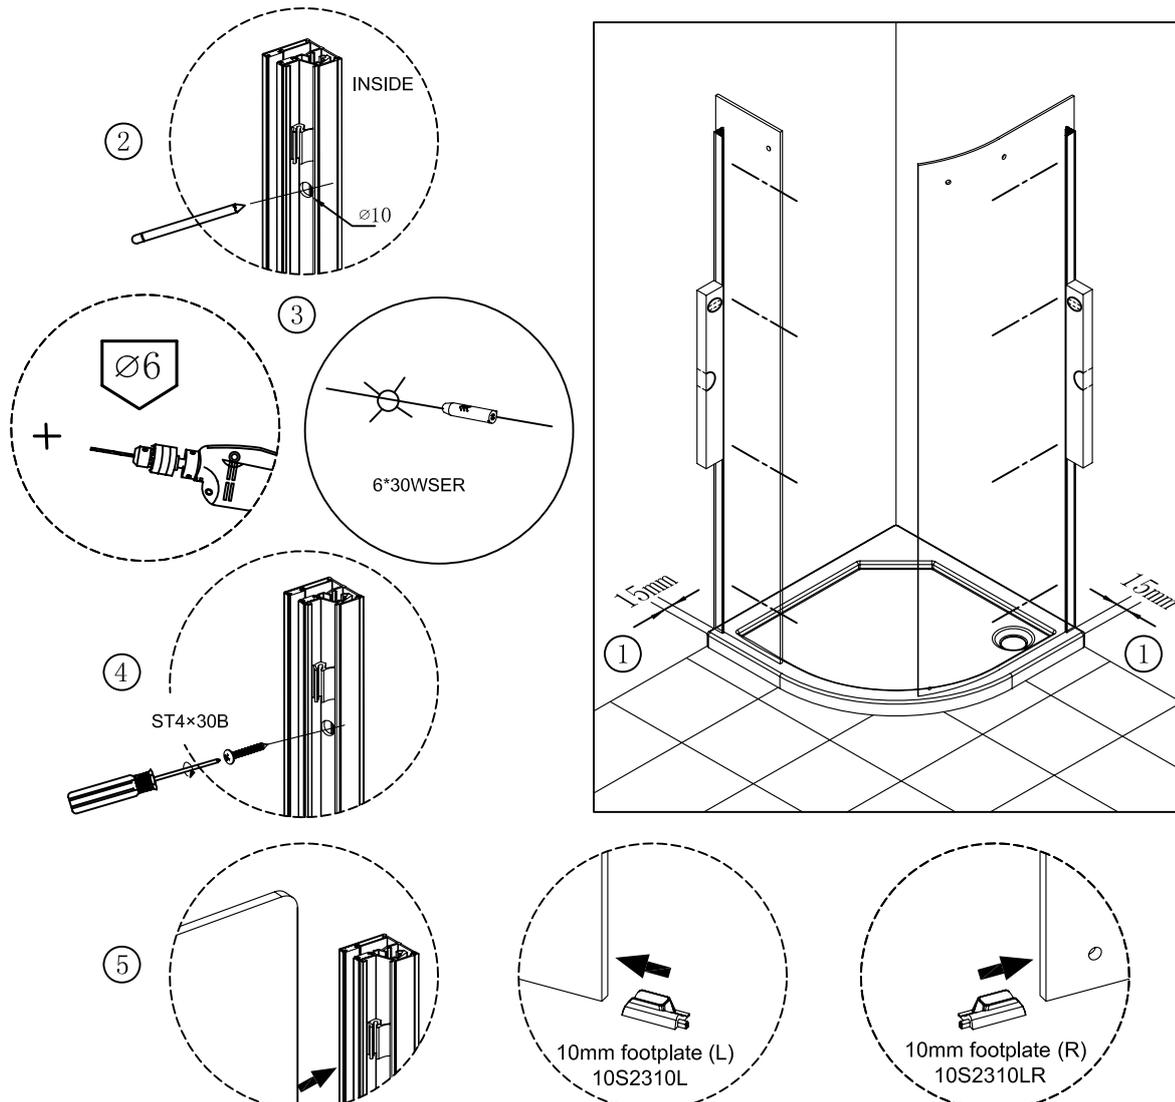

Step 6.

Fix the middle hole in the rail to the curved fixed panel first. Fix the top rail (slot on inside to bottom) to the fixed panels by inserting part **10S17P1** through the glass from the outside, and positioning chrome disc **10S17P2** between the rail and glass and fixing with screw **M8*30HHCS** and 5mm hex key ensure the 3 washers are present as shown.

Step 7.

Ensure the top rail is level. Then fix the rail to the second hole in the curved fixed panel. Finally fix the rail to the flat fixed panel. Tighten screw **M8*30HHCS**. Tighten wall profile onto the glass in 2 places until final adjustment is completed .



Note: You may need to adjust the glass in or out of the wall profile to ensure both panels connect to the rail. Ensure fixed panels are vertical after adjusting.







Step 8.

Attach the rollers to the moving panels (wheel to outside of curved moving panel) by inserting screw **M8*30HHCS** through the chrome disc **10SRINF** and glass and attaching to the roller. Ensure washers are present.

Step 9.

Attach the glass locating pin to moving panels (pin to outside of curved moving panel) by inserting screw **M5*20HHCS** through chrome disc **10S17P2** and the glass and attaching to the locating pin **10S17P1**. Ensure washers are present.

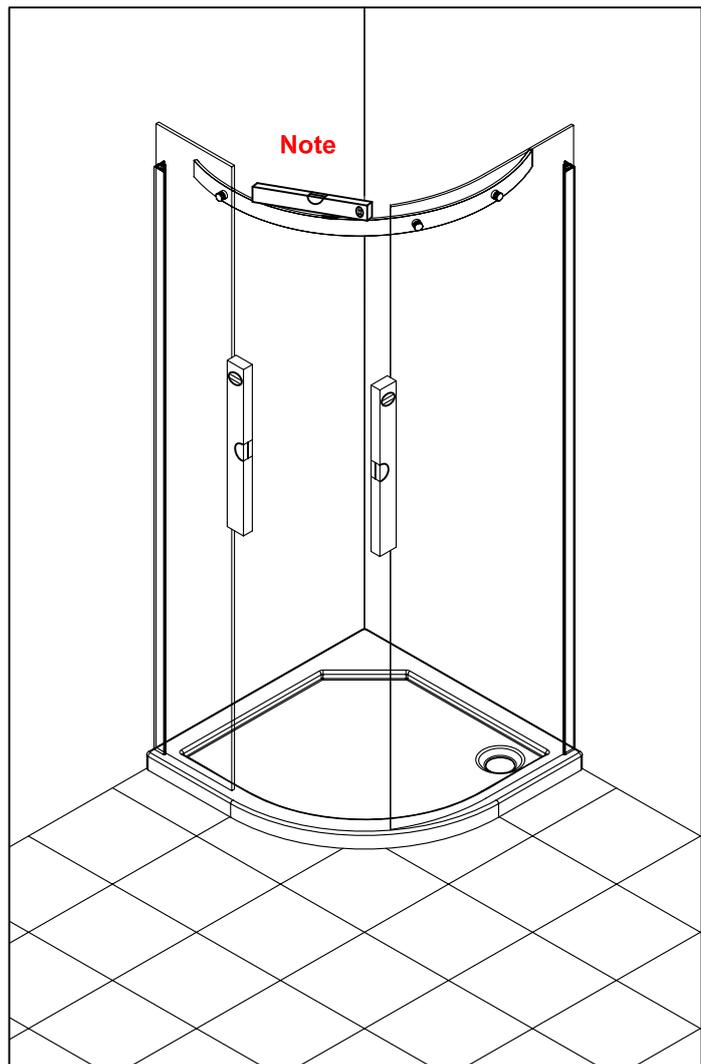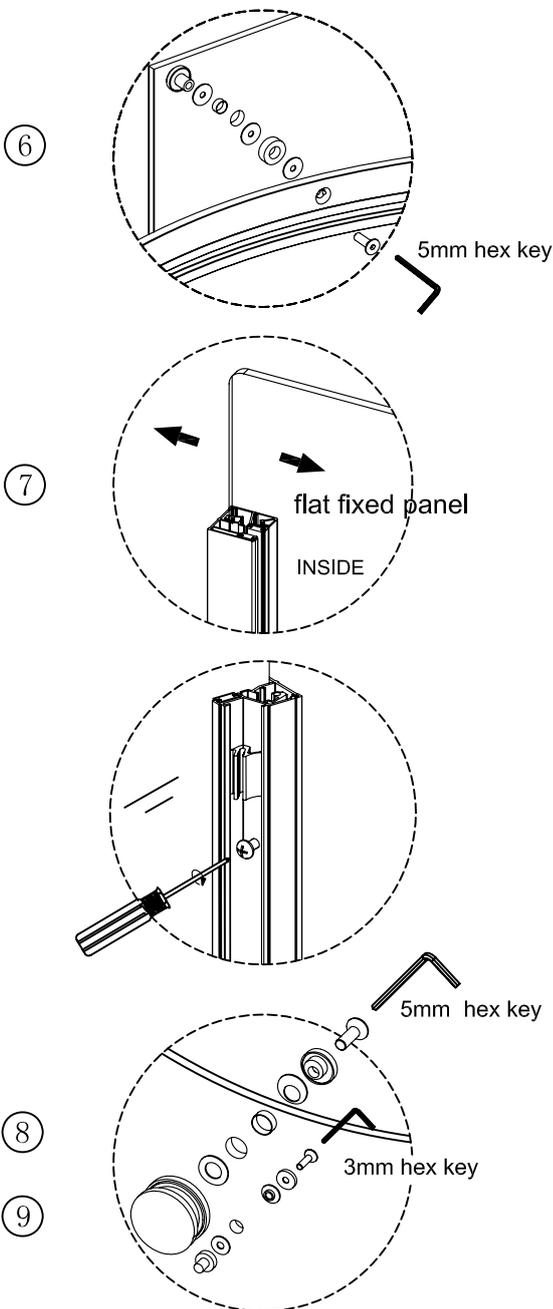

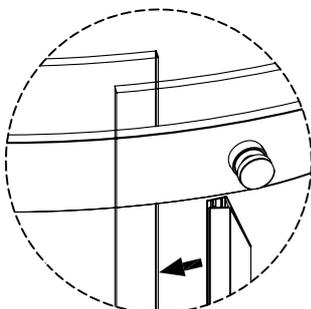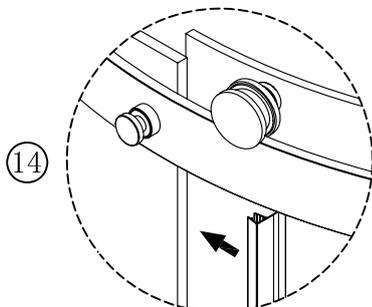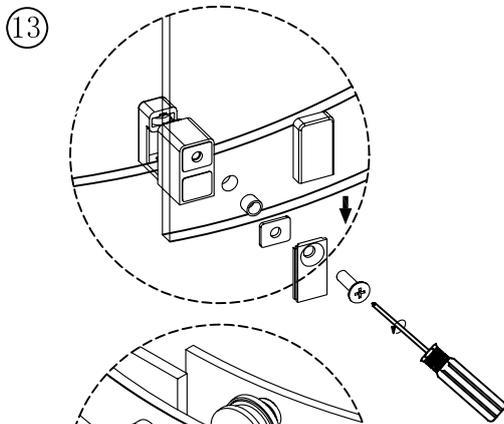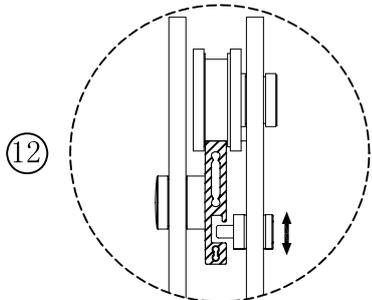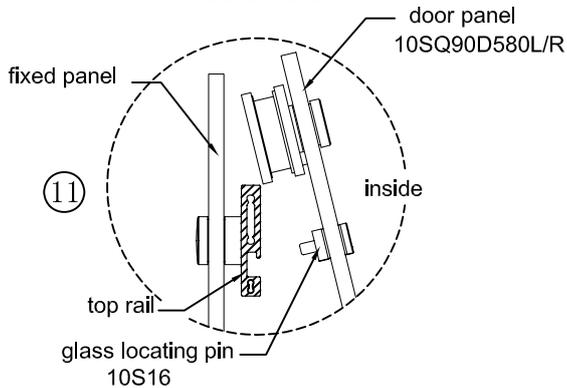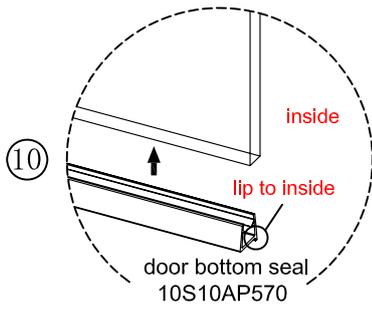

Step 10.

Attach the bottom seal **10S10AP570** to the bottom of the moving panel, lip on seal to inside. Seal may need to be adapted to size.

Step 11.

At the door opening from the inside (with bottom of door angled towards back wall) slot the top rollers onto the rail.

Note: Ensure the locating pin does not scratch the inside of the top rail when fitting the moving panel.

Step 12.

Temporarily adjust locating pin so it is in the middle of the slot on the rail.


Step 13.


Assemble bottom glide housing onto the bottom of the door panel and position at the corner of the fixed panel. Inserting screw **M6*25CSC** through plate **10S11AP1**, washer **10S11AP5** and glass and into the glide housing. Slot on cover cap **10S11AP4**.

Step 14.

Fit upright seals **10S09P1870** to the edges of the flat fixed panel and to the back of the door panel. The door panel upright seal shall fit on top of the bottom seal fitted in step 10.


Note: If the seal on the back of the moving panel is rubbing of the curved fixed panel when sliding the door panel, then the wall profile and, or rollers needs to be adjusted as in step 15 & 16. If after adjusting the seal is still rubbing of the fixed panel, it can be placed on the front of the curved fixed panel instead.

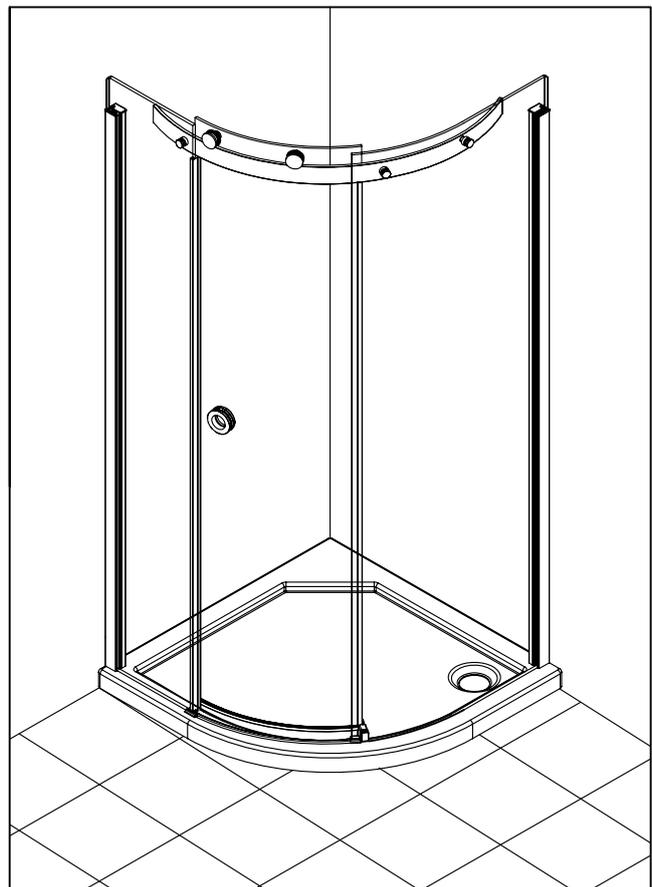

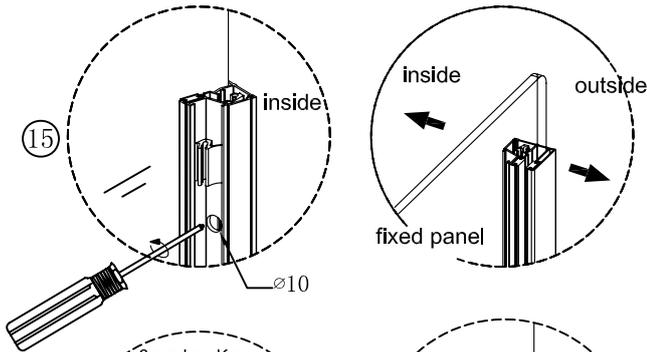


Step 15.

To ensure the door closes correctly onto the upright seal, loosen where the wall profiles are fixed to the wall and push in or out to align the door panel correctly.
Note: There should be an even gap (1 – 2mm, from top to bottom) between the fin of the seal on the flat fixed panel and the moving panel.

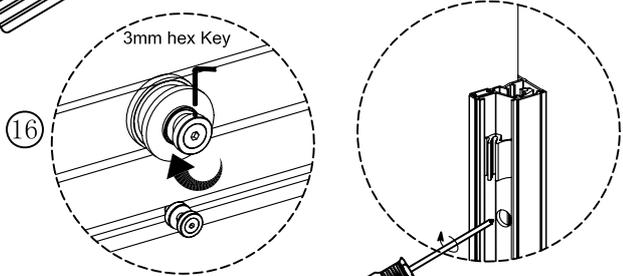

Step 16.


The rollers can be adjusted to alter the height of the door panel and the closing position. Loosen screw and rotate inner disc **10SRINF** (hole in the roller inner disc shows the high point of the roller - this can be used as a lever with a hex key to turn). When adjustment is finished, tighten fixing to wall. Ensure locating pin is still central in the slot and tighten.

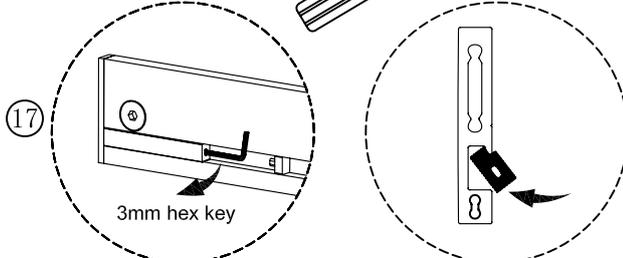

Step 17.


The closing point on the moving panel can be changed so the door handle goes fully behind the fixed panel giving a bigger opening space. **FULLY** insert the 3mm hex key into the rubber stop (slide plastic cap forward) and use as a lever to gently pull out the stop – adapt to required length and reinsert. Alternatively push in the smaller roller stop **10S06AP40** from the bottom.

WARNING: BY INCREASING YOUR OPENING SPACE AND ALLOWING THE MOVING PANEL TO FULLY OPEN, THE HANDLE WILL GO FULLY BEHIND THE FIXED PANEL. BE CAREFUL NOT TO INJURE YOUR HAND!!

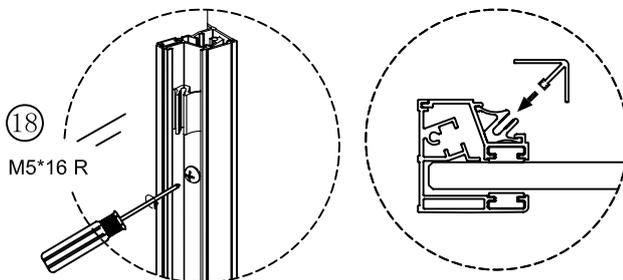


Step 18.

Tighten all clamping screw in the wall profile. Clip on wall profile trim strip **10S03AP1850** to inside of wall profile.

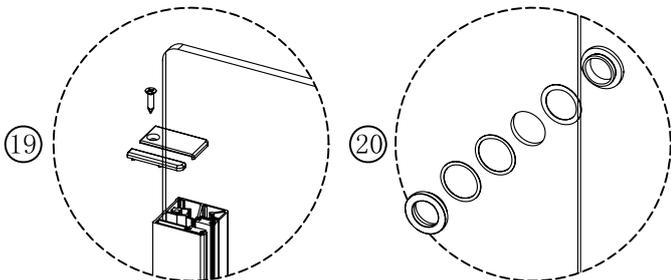


Step 19.

Insert outer wall profile cover caps (use a dab of silicone underneath to hold) and fix inside cover caps with screw **ST4*16G**.

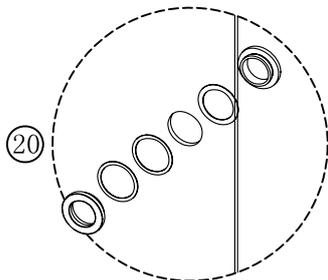

Step 20.

Attach handle - ensure washers are present on both sides of the glass.
Note: Handle cannot be removed once fitted tightly.

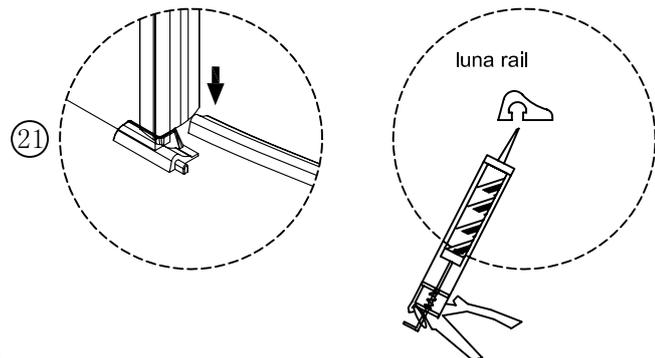

Step 21.

Fit Luna rail **10S28P527** to footplates. Use a small bead of silicone along the underneath of the rail to fix to the tray. Luna rail may require adapting to length.

Note: Ensure door panel does not hit the wall when fully opened. If it does:

1. Adjust wall profile and roller as in step 15 and 16.
2. Or, use the longer roller stops, as in step 17

Step 22.

Use a quality silicone sealant and applicator gun to seal the finished door.

SEALING INSIDE


Seal top to bottom on the **INSIDE** between the wall profile and the wall.

Note: Do not apply sealant on the inside of the tray

SEALING OUTSIDE

Seal only along bottom on the **OUTSIDE** between it and the tray and approx 50mm up between the wall profile and the wall.

24 HRS

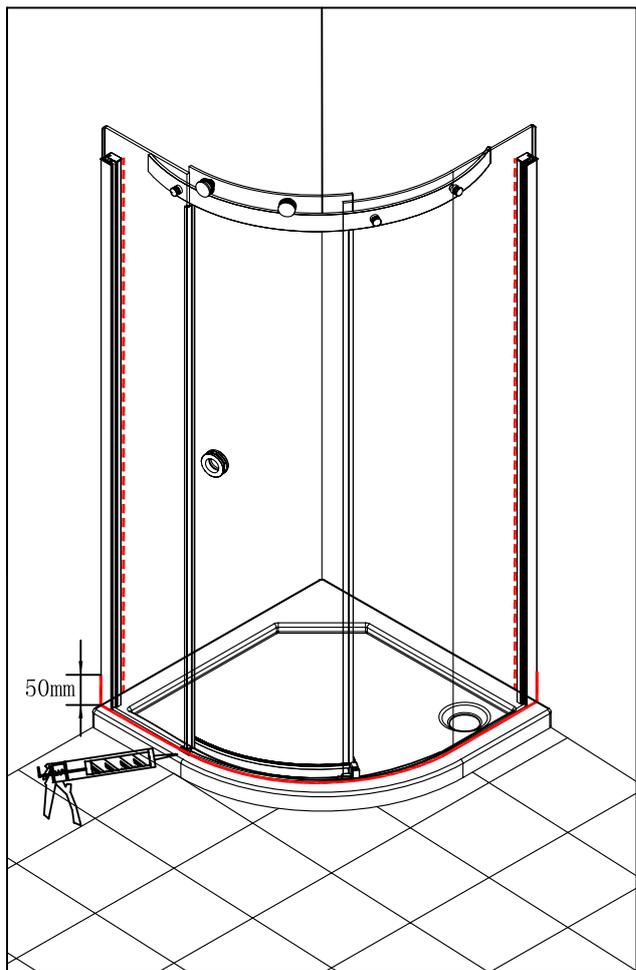

TROUBLE SHOOTING GUIDE

DOOR NOT ALIGNING

1. Is the tray 100% level? (see page 3).
2. Have the wall been checked at different levels to ensure consistency?
3. Are the wall profiles stepped in 15mm from the edge of the tray? (see step 1).
4. Do the finished tile measurements on the tray comply with the adjustment listed on the label and in the specifications book?
5. Have the wall profiles been adjusted in or out to ensure door closes properly? (see step 15).
6. Are the rollers properly adjusted? (see step 16).
7. Is the top rail level? (see step 7).
8. Door is touching the back wall when open – product needs to be adjusted correctly – (see note under step 21).
9. Door not closing properly on the closing upright seal? – product needs to be adjusted correctly – (see step 15 and 16).
10. Moving panel seal rubbing of the curved fixed panel – product needs to be adjusted correctly – (see step 14, 15 and 16).

DOOR LEAKING

1. Is the bottom seal fitted on the glass panel? (see step 10)
2. Are the upright seals fitted? (see step 14)
3. Is the door sealed correctly? (see step 22)

OTHERS

1. Door is hitting the bottom of the glide - adjust rollers to raise door (see step 16).
2. Opening space is too small – need to reduce the roller stop length (see step 17).
3. Bottom moving panel seal **10S10AP570** is hard to assembly – put in warm water for a few minutes to soften and then assemble.
4. Rubbing/scratching noise when door is being opened and closed – locating pin is not adjusted. Must be in centre of slot on the top rail (See step 12)

1 DOOR / OFFSET QUADRANT

WE ARE SURE YOU WILL BE PLEASED WITH YOUR NEW MERLYN SHOWER DOOR.

Where a shower door has been installed contrary to these instructions, Merlyn cannot accept responsibility for any loss or damage, however caused, and any on-site service incur a charge.

www.merlynbathrooms.com

FAILURE TO FOLLOW THE NEW INSTRUCTIONS CORRECTLY MAY INVALID YOUR GUARANTEE